


Service and Repair

REMOVAL

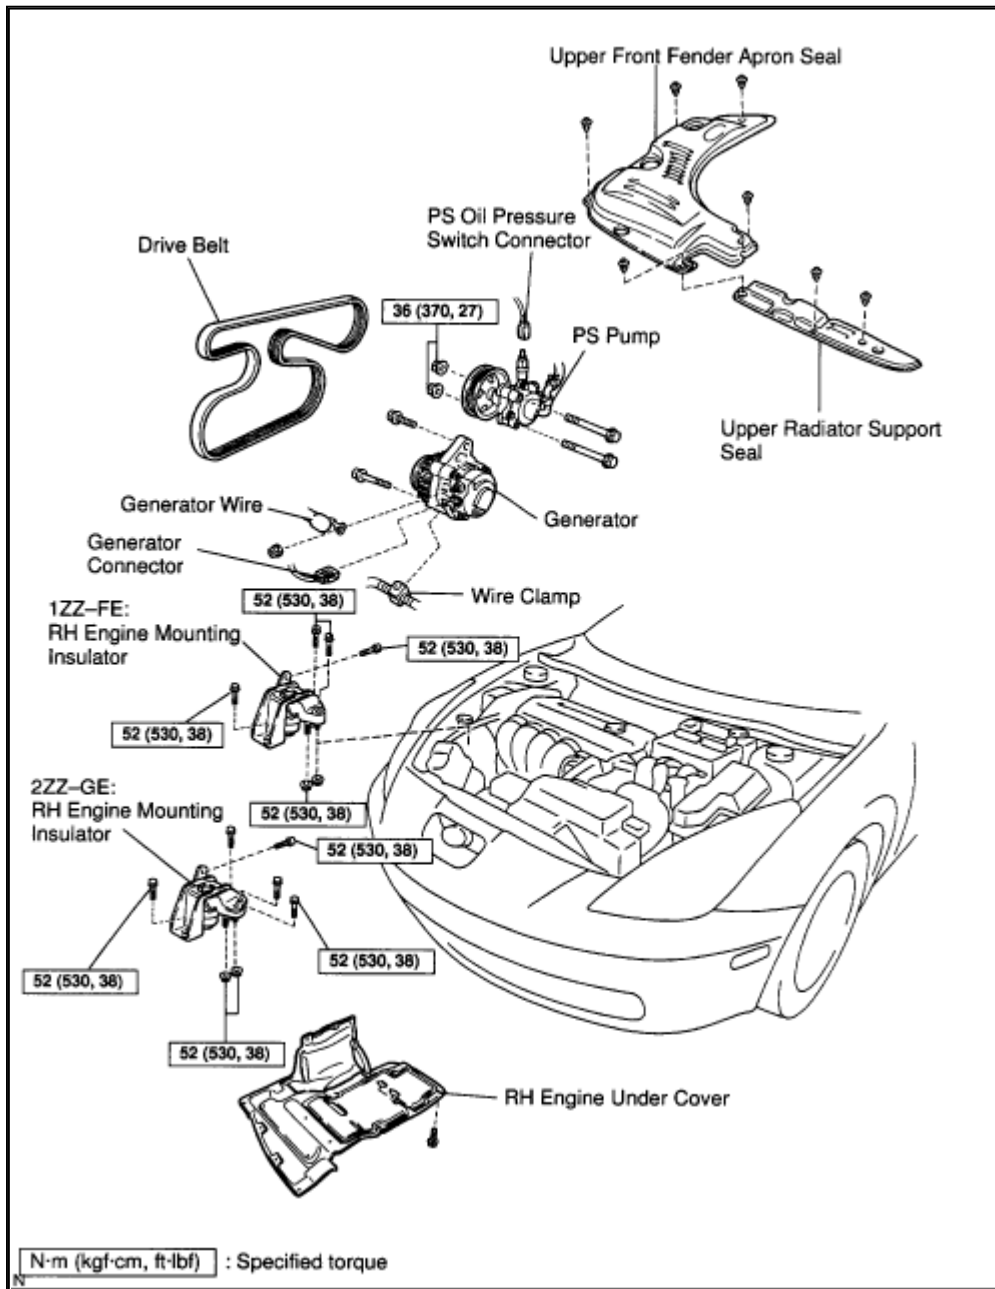


ZOOM

SIZED FOR PRINT

Related Components



1ZZ-FE:

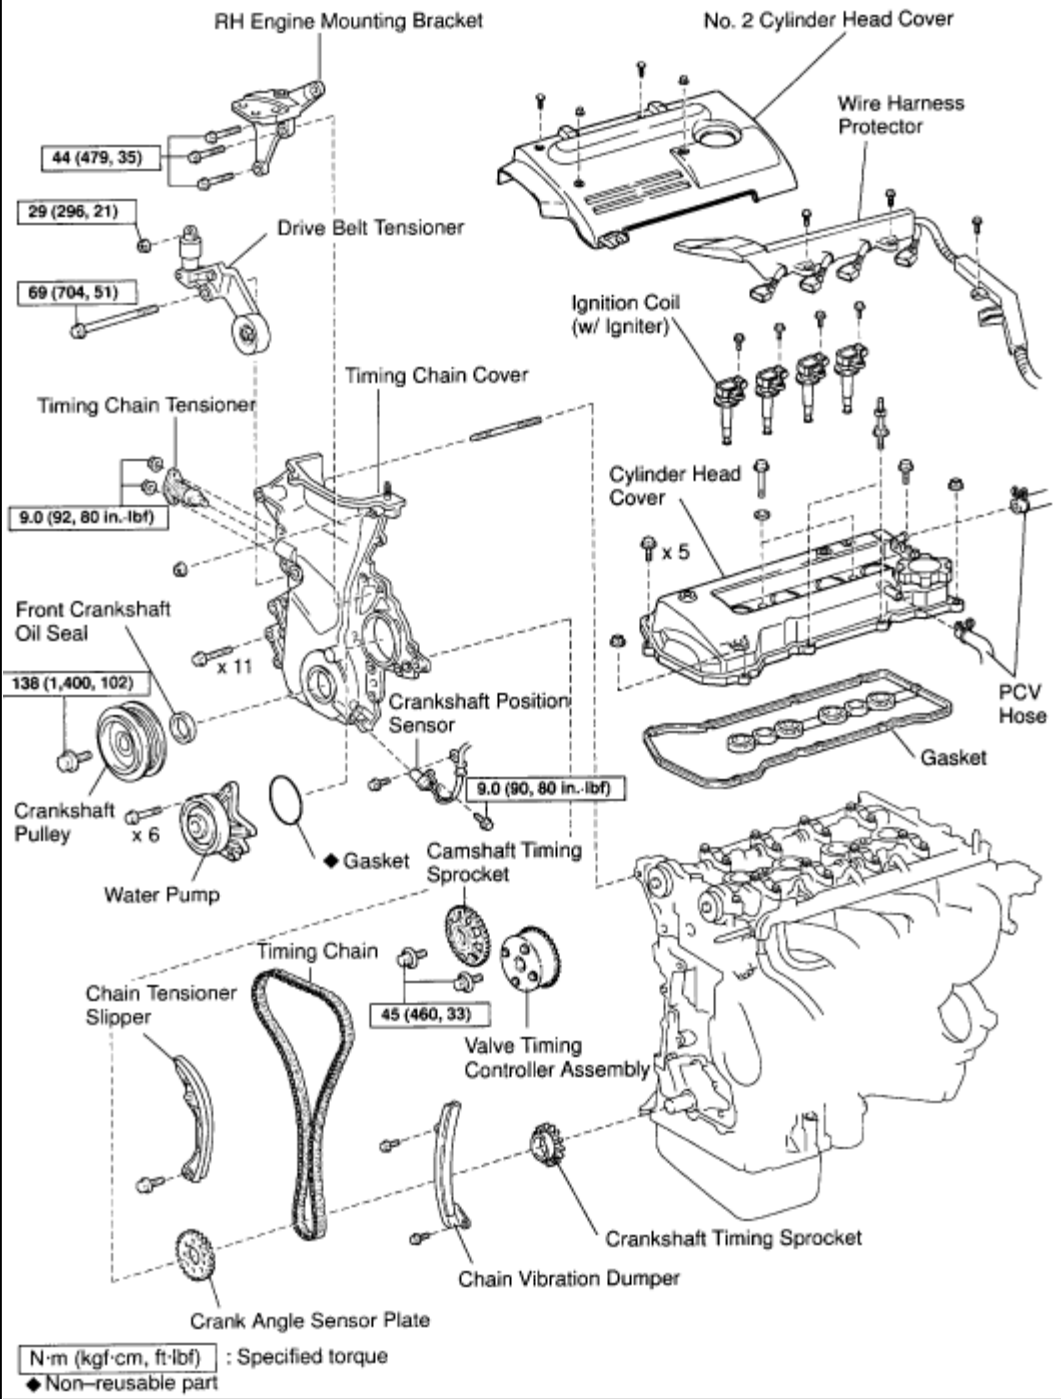


ZOOM SIZED FOR PRINT

1ZZ-FE



2ZZ-GE:

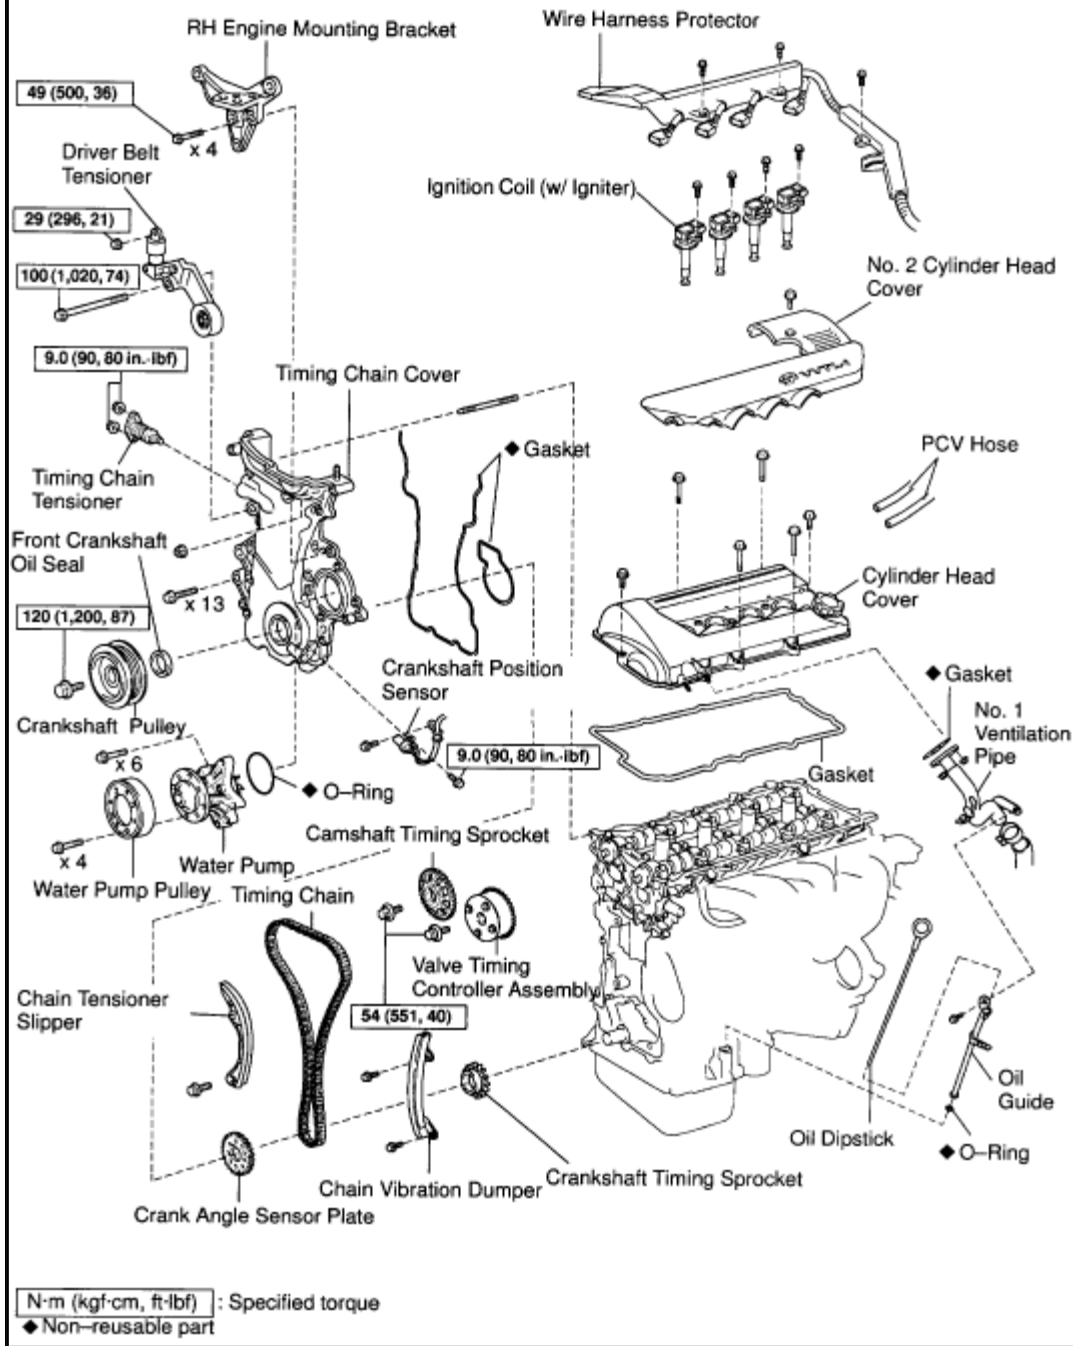


ZOOM SIZED FOR PRINT

2ZZ-GE

1. REMOVE UPPER FRONT FENDER APRON SEAL AND UPPER RADIATOR SUPPORT SEAL
2. DRAIN ENGINE COOLANT
3. REMOVE RIGHT-HAND FRONT WHEEL
4. REMOVE RIGHT-HAND ENGINE UNDER COVER
5. REMOVE **DRIVE BELT** AND GENERATOR
6. DISCONNECT PS PUMP FROM ENGINE
 - a. Disconnect the PS oil pressure switch connector.
 - b. Remove the 2 nuts and through bolts, and disconnect the PS pump from the engine. **HINT:** Put aside the

pump and suspend it to the cowl with a string.


7. REMOVE RIGHT-HAND ENGINE MOUNTING INSULATOR

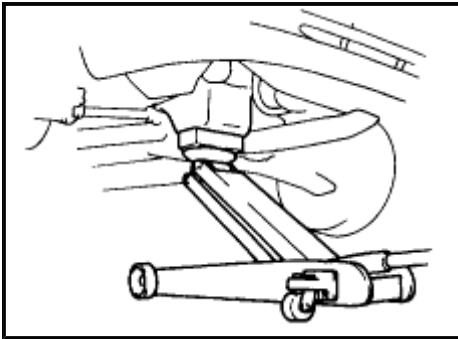

ZOOM

SIZED FOR PRINT


- a. Set the jack to the engine. **HINT:** Place a wooden block between the jack and engine.
- b. 1ZZ-FE: Remove the 4 bolts, 2 nuts and Right-Hand engine mounting insulator.

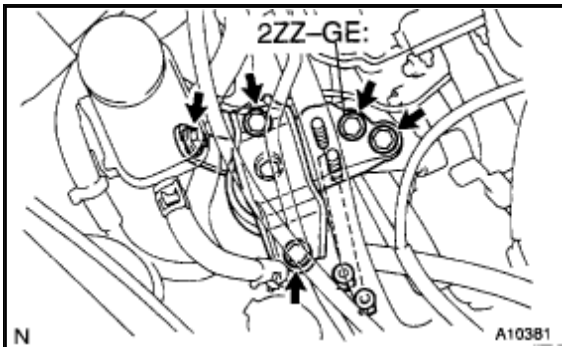

ZOOM

SIZED FOR PRINT

- c. 2ZZ-GE: Remove the 5 bolts, 2 nuts and Right-Hand engine mounting insulator.

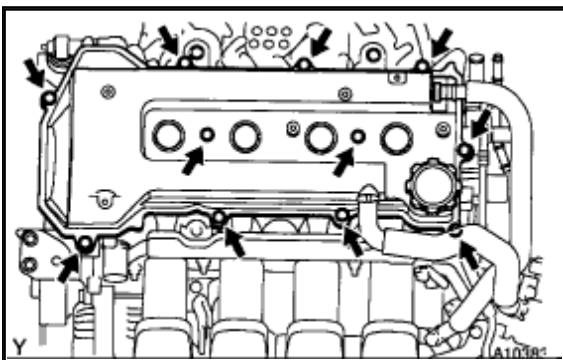

ZOOM

SIZED FOR PRINT

8. 1ZZ-FE: REMOVE CYLINDER HEAD COVER

- a. Remove the 4 bolts and No. 2 cylinder head cover.
- b. Remove the 4 ignition coils.
- c. Disconnect the 2 PCV hoses from the cylinder head.
- d. Remove the 9 bolts, 2 seal washers, 2 nuts, cylinder head cover and gasket.

9. 2ZZ-GE: REMOVE CYLINDER HEAD COVER


- a. Remove the 4 bolts and No. 2 cylinder head cover.
- b. Remove the ignition coils.
- c. Disconnect the 2 PCV hoses from the cylinder head cover.



ZOOM

SIZED FOR PRINT

- d. Remove the 2 nuts, bolt and disconnect the No. 3 ventilation hose from the No. 1 ventilation pipe.
- e. Remove the No. 1 ventilation pipe and gasket.

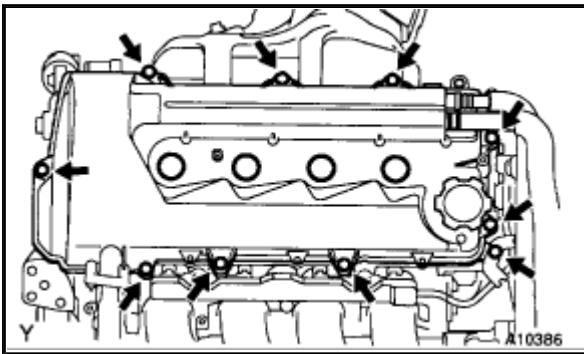


ZOOM

SIZED FOR PRINT

- f. Remove the 9 bolts, wire harness protector, cylinder head cover and gasket.


10. SET NO. 1 CYLINDER TO TDC/COMPRESSION

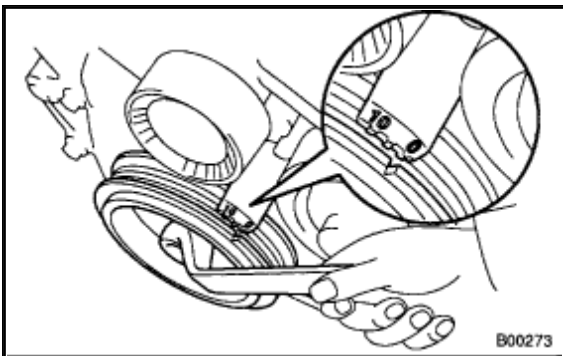

ZOOM

SIZED FOR PRINT

- a. Turn the crankshaft pulley, and align its groove with timing mark "0" of the timing chain cover.

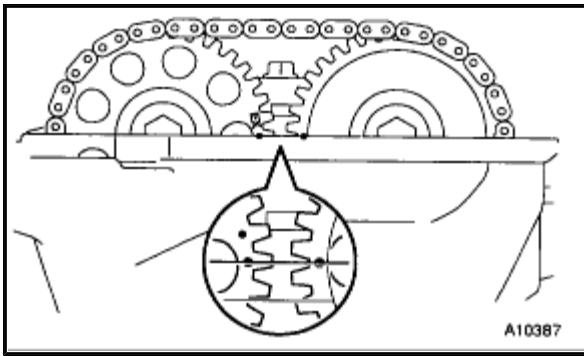


ZOOM

SIZED FOR PRINT

- b. Check that the point marks of the [camshaft](#) timing sprockets are in straight line on the timing chain cover surface as shown in the illustration. If not, turn the [crankshaft](#) **1 revolution (360°)** and align the marks as above.


11. REMOVE CRANKSHAFT PULLEY

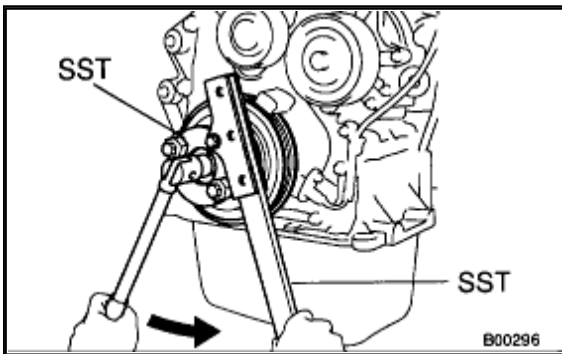

ZOOM

SIZED FOR PRINT

- a. Using Special Service Tool (SST) and 2 nuts (width: 10 mm (0.25 inch)), remove the [pulley](#) bolt. (SST) 09213-70010, 09330-00021

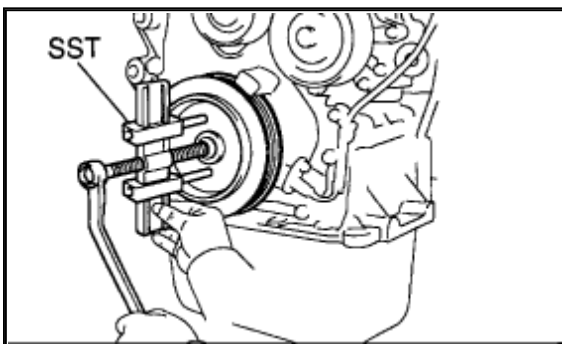


ZOOM

SIZED FOR PRINT

- b. Remove the crankshaft pulley. **HINT:** If necessary, remove the [pulley](#) with SST. SST 09950-50012 (09951-05010, 09952-05010, 09953-05020, 09954-05020)




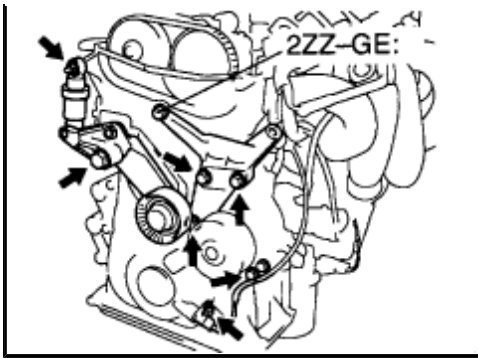

ZOOM

SIZED FOR PRINT


12. DISCONNECT CRANKSHAFT POSITION SENSOR FROM TIMING CHAIN COVER Remove the 2 bolts and crankshaft position sensor.
13. REMOVE [DRIVE BELT TENSIONER](#) Remove the bolt, nut and drive belt tensioner.
14. REMOVE RIGHT-HAND ENGINE MOUNTING BRACKET
 - a. 1ZZ-FE: Remove the 3 bolts and mounting bracket.
 - b. 2ZZ-GE: Remove the 4 bolts and mounting bracket.

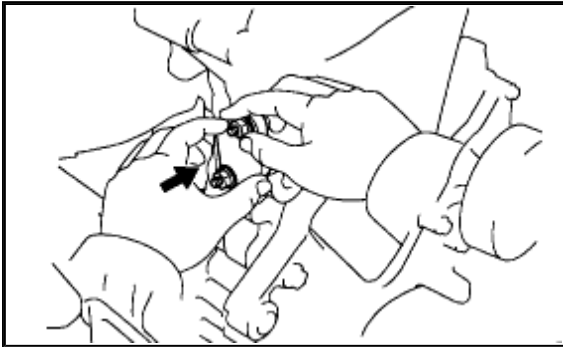

ZOOM

SIZED FOR PRINT

15. REMOVE CHAIN TENSIONER Remove the 2 nuts and chain tensioner.
16. REMOVE WATER PUMP [See: Cooling System](#)

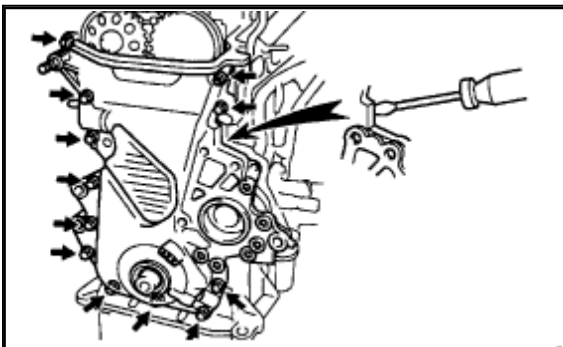


ZOOM

SIZED FOR PRINT

17. 1ZZ-FE: REMOVE TIMING CHAIN COVER
 - a. Remove the 11 bolts and nut.
 - b. Using a torx wrench socket (E8), remove the stud bolt.

- c. Remove the timing chain cover by prying the portions between the cylinder head and cylinder block with a screwdriver. **NOTICE:** Be careful not to damage the contact surfaces of the timing chain cover, cylinder head and cylinder block.

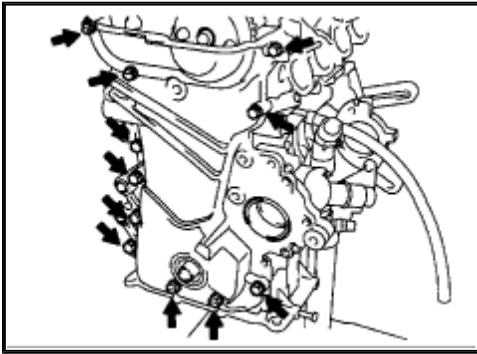

ZOOM


SIZED FOR PRINT

18. 2ZZ-GE: REMOVE TIMING CHAIN COVER

- a. Remove the 12 bolts.
- b. Using a torx wrench socket (E8), remove the stud bolt.
- c. Remove the timing chain cover and 2 gaskets.

19. REMOVE CRANK ANGLE SENSOR PLATE

20. REMOVE CHAIN TENSIONER SLIPPER Remove the bolt and slipper.

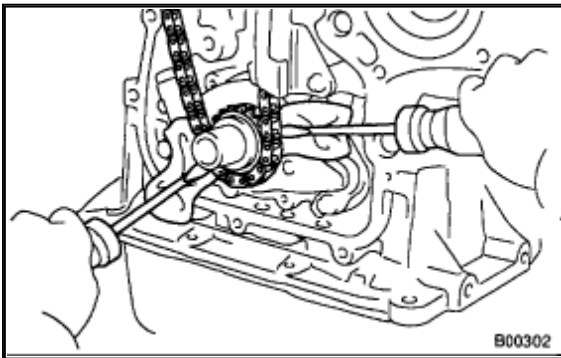


ZOOM

SIZED FOR PRINT

21. REMOVE TIMING CHAIN AND CRANKSHAFT TIMING SPROCKET If the crankshaft timing sprocket cannot be removed by hand, use 2 screwdrivers. **NOTICE:** Position shop rags as shown to prevent damage.

22. REMOVE CHAIN VIBRATION DAMPER Remove the 2 bolts and damper.

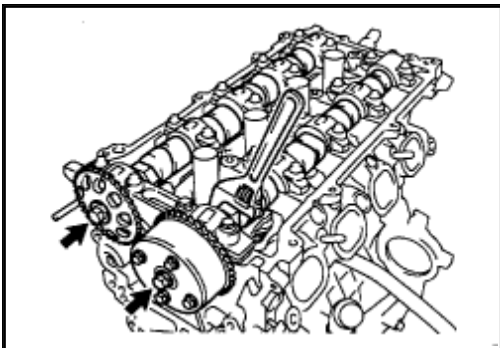


ZOOM

SIZED FOR PRINT

23. REMOVE VALVE TIMING CONTROL ASSEMBLY AND CAMSHAFT TIMING SPROCKET Hold the hexagonal head wrench portion of the camshaft with a wrench, and remove the bolt, valve timing controller assembly and timing sprocket. **NOTICE:**
- o Be careful not to damage the cylinder head and valve lifter with the wrench.
 - o Do not disassemble the valve timing controller assembly.

INSPECTION


1. INSPECT TIMING CHAIN AND TIMING SPROCKETS

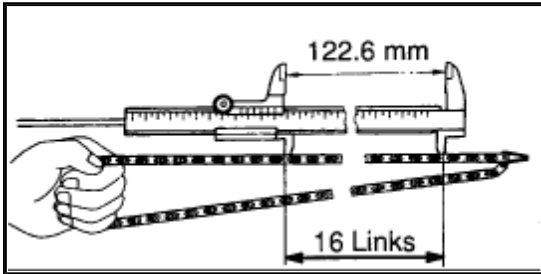

ZOOM

SIZED FOR PRINT

- a. Using a vernier calipers, measure the length of 16 links with the chain dully stretched. Maximum chain elongation: **122.6 mm (4.827 inch)** If the elongation is greater than maximum, replace the chain. **HINT:** Make the same measurements pulling at 3 or more places selected at random.

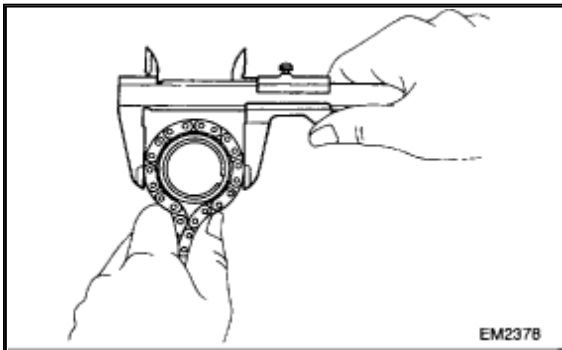


ZOOM

SIZED FOR PRINT


- b. Wrap the chain around the timing sprocket.
- c. Using a vernier calipers, measure the timing sprocket diameter with the chain. **NOTICE:** Vernier calipers must contact the chain rollers for measuring. Minimum sprocket diameter (w/ Chain): **Camshaft: 97.3 mm (3.831 inch)** **Crankshaft: 51.6 mm (2.031 inch)** If the diameter is less than minimum, replace the chain and sprockets.



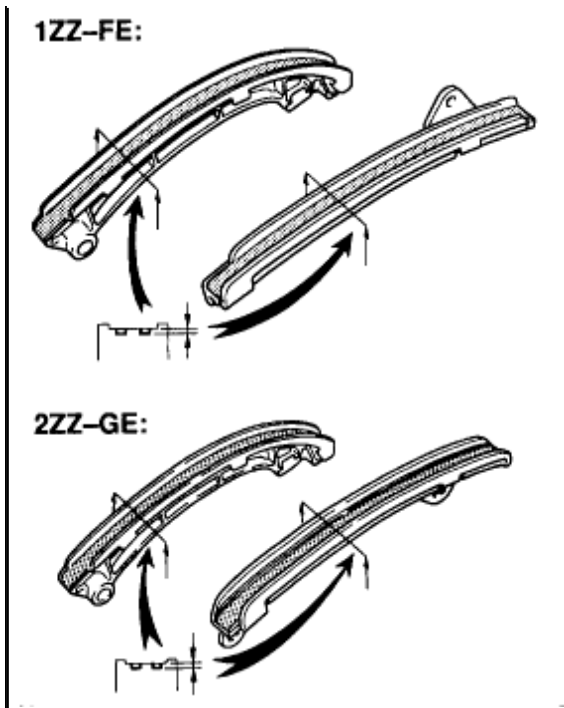

ZOOM SIZED FOR PRINT

2. INSPECT CHAIN TENSIONER SLIPPER AND VIBRATION DAMPER Measure the chain tensioner slipper and vibration damper wears. Maximum wear: **1.0 mm (0.039 inch)** If the wear is greater than maximum, replace the slipper and/or damper.

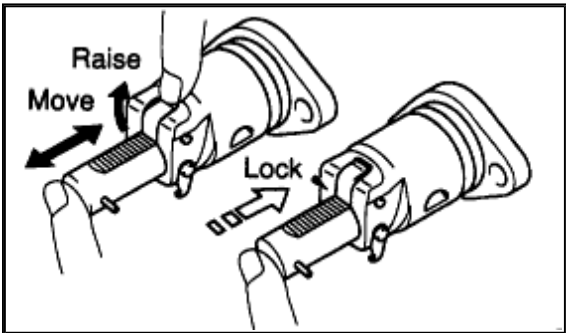


ZOOM SIZED FOR PRINT

- 3. INSPECT CHAIN TENSIONER
 - a. Check that the plunger moves smoothly when the ratchet pawl is raised with your finger.
 - b. Release the ratchet pawl and check that the plunger is locked in place by the ratchet pawl and does not move when pushed with your finger.
- 4. INSPECT OIL JET [See: Engine Lubrication](#)

REPLACEMENT



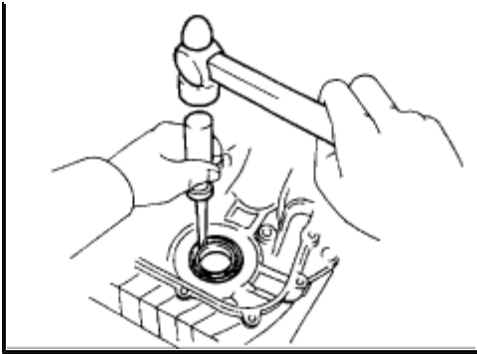


ZOOM

SIZED FOR PRINT

HINT: There are 2 methods (A and B) to replace the oil seal which are as follows:


Replace Crankshaft Front Oil Seal

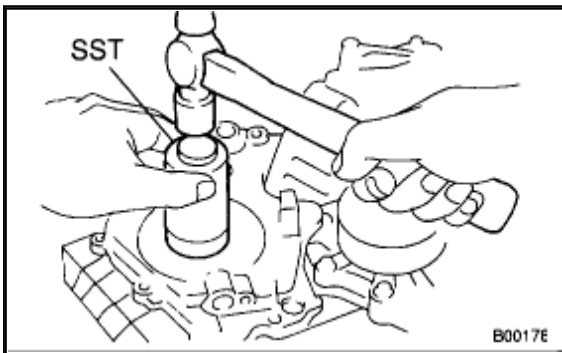

ZOOM

SIZED FOR PRINT


- a. If timing chain cover is removed from cylinder block.
 1. Using a screwdriver and a hammer, tap out the oil seal.
 2. Using Special Service Tool (SST) and a hammer, tap in a new oil seal until its surface is flush with the timing chain cover edge. (SST) 09309-37010
 3. Apply MP grease to the oil seal lip.
- b. If timing chain cover is installed to the cylinder block.

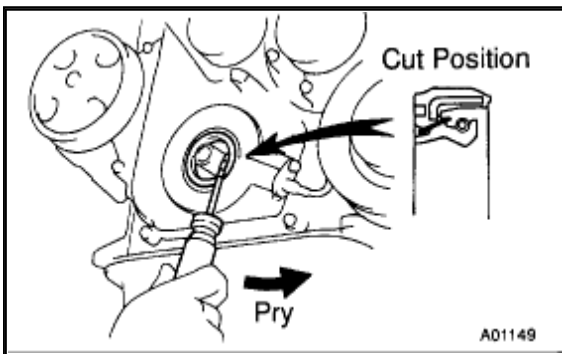

ZOOM

SIZED FOR PRINT

1. Using a knife, cut off the oil seal lip.
2. Using a screwdriver, pry out the oil seal. **NOTICE:** Be careful not to damage the [crankshaft](#). Tape the screwdriver tip.

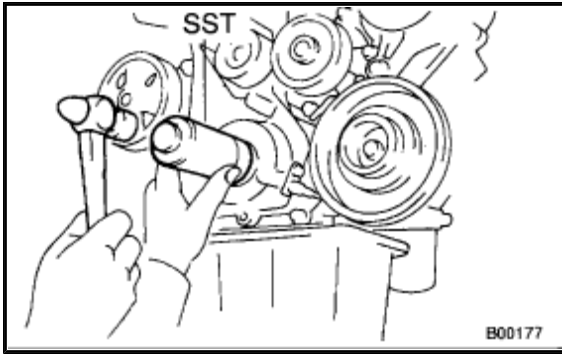

ZOOM


SIZED FOR PRINT

3. Using SST and a hammer, tap in the oil seal until its surface is flush with the timing chain cover edge. SST 09309-37010

INSTALLATION

1. INSTALL VALVE TIMING CONTROLLER ASSEMBLY AND [CAMSHAFT](#) TIMING SPROCKET


- a. Apply engine oil in the range from the tip of the intake camshaft to 16 mm from that tip.

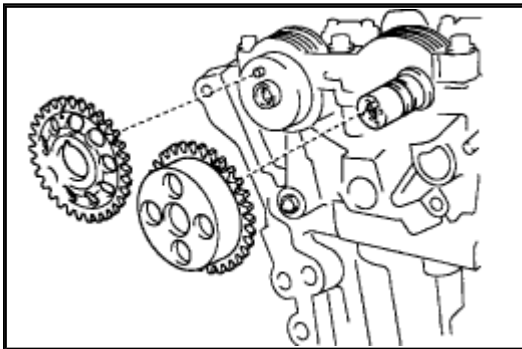

ZOOM

SIZED FOR PRINT

- b. Align the timing mark on the valve timing controller assembly with the knock pin, and install the valve timing controller assembly to the cam shaft. **NOTICE:** Do not push valve timing controller assembly to the cam shaft forcibly when installing it.
- c. Align the knock pin hole in the cam shaft timing sprocket with the knock pin of the cam shaft, and exhaust the sprocket to the cam shaft.

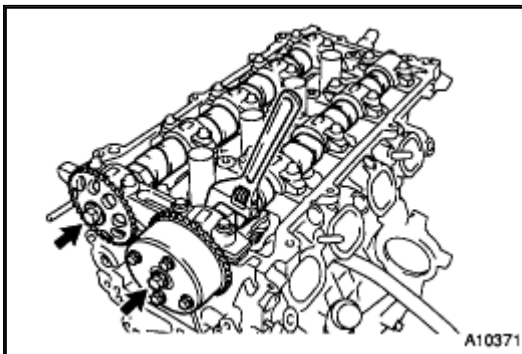


ZOOM

SIZED FOR PRINT

- d. Temporarily install the timing sprocket bolt.
- e. Hold the hexagon wrench head portion of the [camshaft](#) with a wrench, and tighten the timing sprocket bolt.
Torque: 1ZZ-FE: 45 Nm (460 kgf-cm, 33 ft. lbs.) 2ZZ-GE: 54 Nm (551 kgf-cm, 40 ft. lbs.)


2. SET NO. 1 CYLINDER TO TDC/COMPRESSION

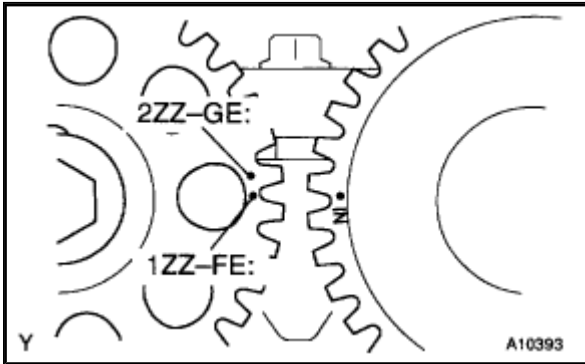

ZOOM

SIZED FOR PRINT

- a. Turn the hexagonal wrench head portion of the camshafts, and align the point marks of the [camshaft](#) timing sprockets.

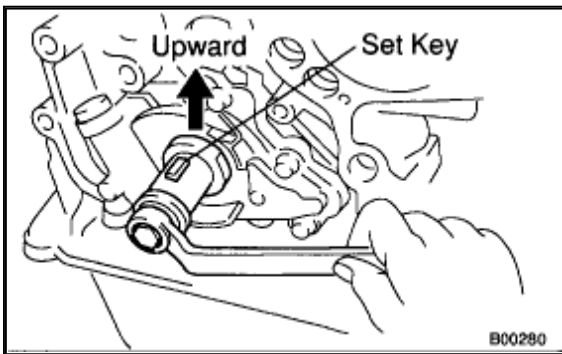


ZOOM

SIZED FOR PRINT


- b. Using a crankshaft pulley bolt, Turn the [crankshaft](#) and set the set key on the crankshaft upward.



1ZZ-FE:

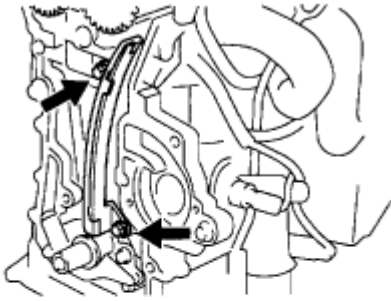


2ZZ-GE:

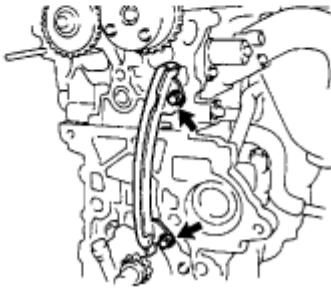

ZOOM

SIZED FOR PRINT


3. INSTALL CHAIN VIBRATION DAMPER Install the damper with the 2 bolts. Torque: 1ZZ-FE: **11 Nm (113 kgf-cm, 8 ft. lbs.)** 2ZZ-GE: **20.5 Nm (209 kgf-cm, 15 ft. lbs.)**
4. INSTALL TIMING CHAIN AND CRANKSHAFT TIMING SPROCKET

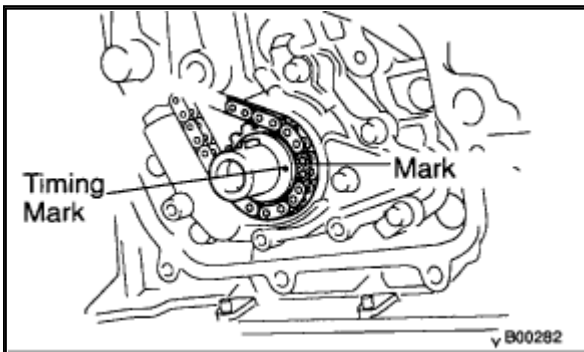

ZOOM

SIZED FOR PRINT

- a. Install the timing chain on the crankshaft timing sprocket with the yellow color link aligned with the timing mark on the crankshaft timing sprocket.

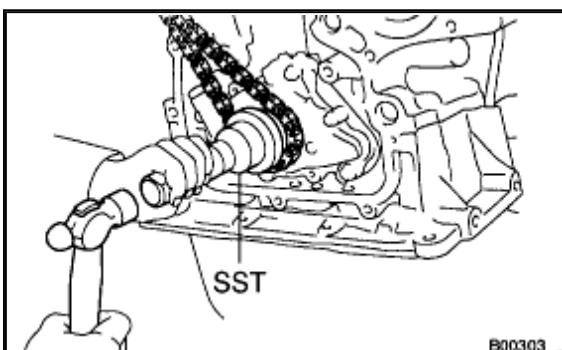


ZOOM

SIZED FOR PRINT

HINT: If necessary, install the sprocket with Special Service Tool (SST) .

(SST) 09223-22010

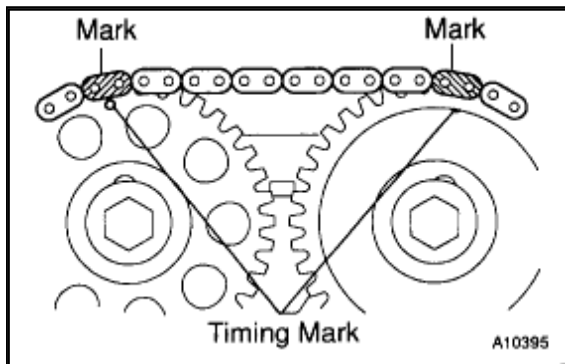


ZOOM

SIZED FOR PRINT

- b. 1ZZ-FE: Install the timing chain on the [camshaft](#) timing sprockets with the yellow color links aligned with the timing marks on the camshaft timing sprockets.
- c. 2ZZ-GE: Install the timing chain on the [camshaft](#) timing sprockets with the orange color links aligned with the timing marks on the camshaft timing sprockets.
- d. Check that the tension between the intake [camshaft](#) timing sprocket and crankshaft timing sprocket.

5. INSTALL CHAIN TENSIONER SLIPPER

- a. Install the slipper with the bolt. Torque: 1ZZ-FE: **18.5 Nm (189 kgf-cm, 14 ft. lbs.)** 2ZZ-GE: **20.5 Nm (209 kgf-cm, 15 ft. lbs.)**

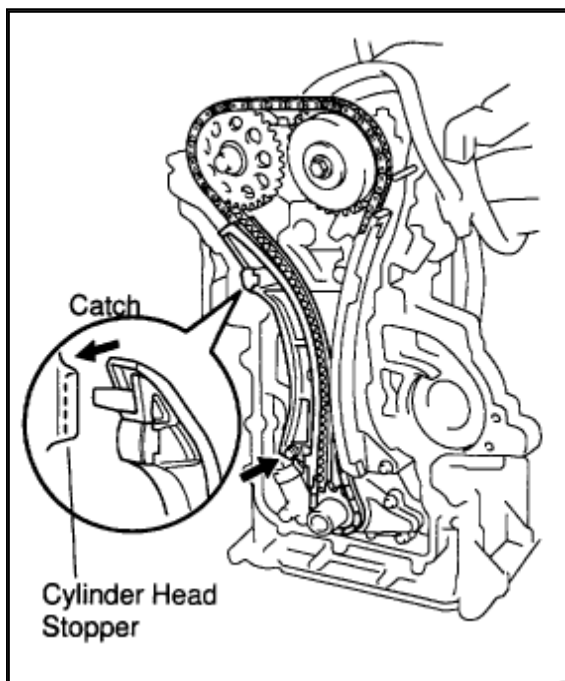


ZOOM

SIZED FOR PRINT

- b. Check that the slipper moves is caught on the cylinder head stopper. **NOTICE:** DO not turn the


[crankshaft.](#)

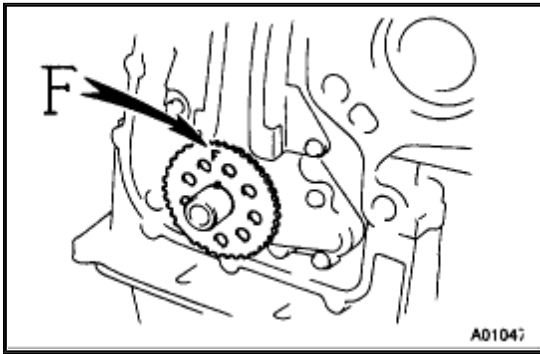


ZOOM

SIZED FOR PRINT

 6. INSTALL CRANK ANGLE SENSOR PLATE Install the plate with the "F" mark facing forward.
7. 1ZZ-FE: INSTALL TIMING CHAIN COVER AND WATER PUMP
 - a. Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surfaces of the timing chain cover, cylinder head and cylinder block.
 - o Using a razor blade and a gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
 - o Thoroughly clean all components to remove all the loose material.
 - o Using a non-residue solvent, clean both sealing surfaces.



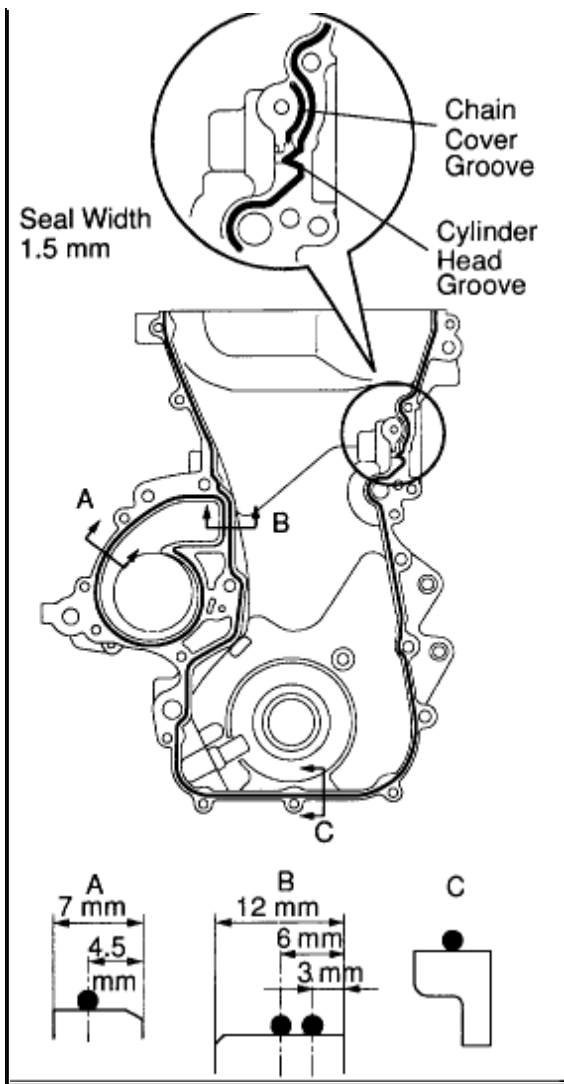


ZOOM SIZED FOR PRINT

- b. Apply seal packing to the timing chain cover as shown in the illustration. Seal packing: Part No. 08826-00100 or equivalent
 - o Install a nozzle that has been cut to a **1.5 mm (0.16 - 0.20 inch)** opening.

HINT: Avoid applying an excessive amount to the surface.

- Parts must be assembled within 3 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.

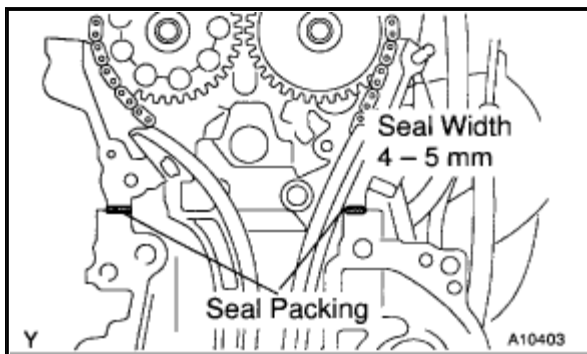


ZOOM

SIZED FOR PRINT

- c. Apply seal packing to 2 locations as shown in the illustration. Seal packing: Part No. 08826-00080 or equivalent
 - o Install a nozzle that has been cut to a **1.5 mm (0.16 - 0.20 inch)** opening.

HINT: Avoid applying an excessive amount to the surface.

- Parts must be assembled within 3 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.

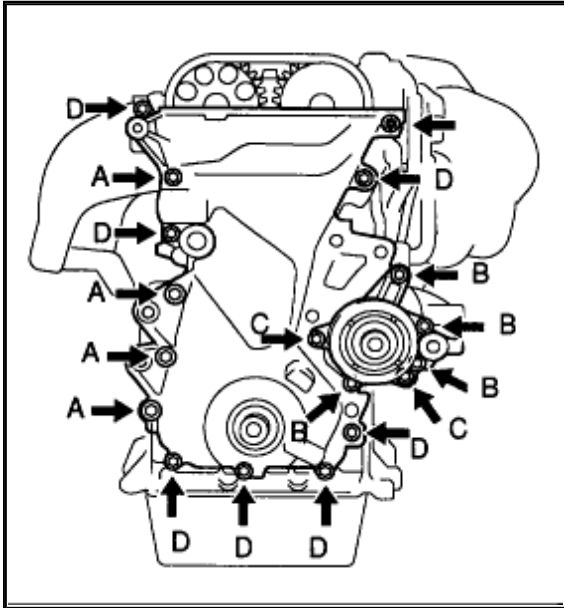

ZOOM

SIZED FOR PRINT

- d. Install the timing chain cover, O-ring water pump with the 17 bolts and nut. Uniformly tighten the bolts and nut in several passes. Torque: 10 mm head:

9 Nm (92 kgf-cm, 80 inch lbs.) for C
13 Nm (133 kgf-cm, 10 ft. lbs.) for A
11 Nm (113 kgf-cm, 8 ft. lbs.) for others
12 mm head: **18.5 Nm (189 kgf-cm, 14 ft. lbs.)**

NOTICE:

- Pay attention not to wrap the chain and slipper over the chain cover seal line.
- After installing the chain cover, must install the mounting bracket and water pump within 15 minutes.


HINT: Each bolt length is indicated in the illustration.

A 45 mm (1.77 inch)
B 35 mm (1.38 inch)
C 30 mm (1.18 inch)
D 25 mm (0.98 inch)

- e. Using a torx wrench socket (E8), install the stud bolt. Torque: **9.3 Nm (95 kgf-cm, 82 inch lbs.)**

8. 2ZZ-GE: INSTALL TIMING CHAIN COVER AND WATER PUMP

- a. Remove any old packing (FIPG) material and be careful not to drop any oil on the contact surfaces of the timing chain cover, cylinder head and cylinder block.
 - o Using a razor blade and a gasket scraper, remove all the old packing (FIPG) material from the gasket surfaces and sealing grooves.
 - o Thoroughly clean all components to remove all the loose material.
 - o Using a non-residue solvent, clean both sealing surfaces.

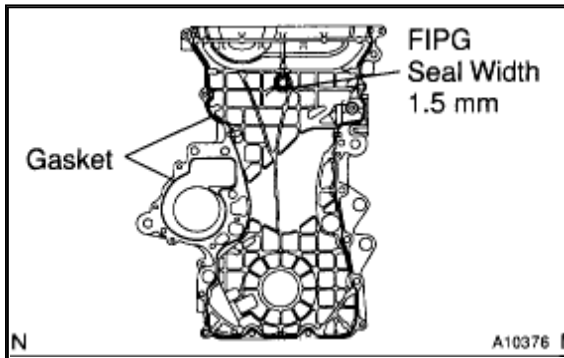

ZOOM


SIZED FOR PRINT

- b. Apply seal packing to the timing chain cover as shown in the illustration. Seal packing: Part No. 08826-00100 or equivalent
 - o Install a nozzle that has been cut to a 1.5 mm opening.

HINT: Avoid applying an excessive amount to the surface.

- Parts must be assembled within 3 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.

- c. Install the 2 gasket to the timing chain cover as shown in the illustration.

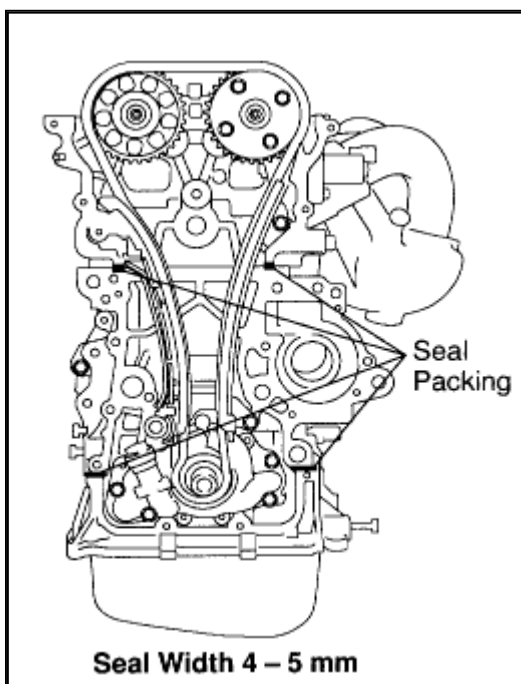

ZOOM


SIZED FOR PRINT

d. Apply seal packing to 4 locations as shown in the illustration. Seal packing: Part No. 08826-00080 or equivalent

- Install a nozzle that has been cut to a **4 - 5 mm (0.16 - 0.20 inch)** opening.

HINT: Avoid applying an excessive amount to the surface.

- Parts must be assembled within 3 minutes of application. Otherwise the material must be removed and reapplied.
- Immediately remove nozzle from the tube and reinstall cap.

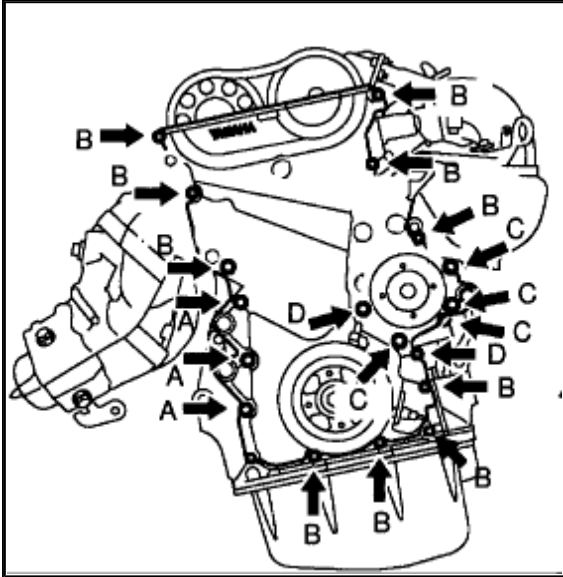


ZOOM

SIZED FOR PRINT

e. Install the timing chain cover, O-ring and water pump with the 19 bolts. Uniformly tighten the bolts in several passes. Torque: A: **21 Nm (214 kgf-cm, 15 ft. lbs.)** B: **11 Nm (113 kgf-cm, 8 ft. lbs.)** C: **9.0 Nm (92 kgf-cm, 80 inch lbs.)** D: **9.0 Nm (92 kgf-cm, 80 inch lbs.)** NOTICE:

- Pay attention not to wrap the chain and slipper over the chain cover seal line.
- After install the chain cover, must install the mounting bracket and water pump within 15 minutes.

f. Using a torx wrench socket (E8), install the stud bolt. Torque: **9.3 Nm (95 kgf-cm, 82 inch lbs.)**

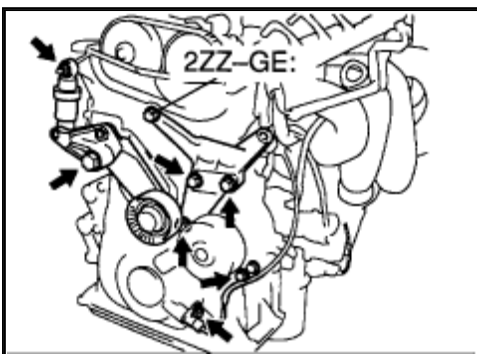

ZOOM

SIZED FOR PRINT


9. 1ZZ-FE: INSTALL RIGHT-HAND ENGINE MOUNTING BRACKET

- a. Apply seal packing to threads of the mounting bolt. Seal packing: Part No. 08826-00080 or equivalent
HINT: Do not apply seal packing to 2 or 3 threads of the bolt end.
 - b. Install the mounting bracket with the 3 bolts. Torque: **47 Nm (479 kgf-cm, 35 ft. lbs.)**
10. 2ZZ-GE: INSTALL RIGHT-HAND ENGINE MOUNTING BRACKET Install the mounting bracket with the 4 bolts. Torque: **49 Nm (500 kgf-cm, 36 ft. lbs.)**
11. INSTALL [DRIVE BELT TENSIONER](#)
- a. Check the appearance before installing the drive belt tensioner. If in case of having the oil leakage, crack, and etc., replace the [drive belt tensioner](#).
 - b. Install the [drive belt tensioner](#). Torque: Bolt:

1ZZ-FE: **690 Nm (704 kgf-cm, 51 ft. lbs.)**
 2ZZ-GE: **100 Nm (1,020 kgf-cm, 74 ft. lbs.)**
 Nut: **29 Nm (296 kgf-cm, 21 ft. lbs.)**

- c. Hook the tool on the hexagonal portion of the [drive belt tensioner](#) bracket and operate drive belt tensioner 3 times with full stroke. **HINT:** Take 3 seconds or more for 1 full stroke.

12. INSTALL CRANKSHAFT POSITION SENSOR Torque: **9.0 Nm (92 kgf-cm, 80 inch lbs.)**

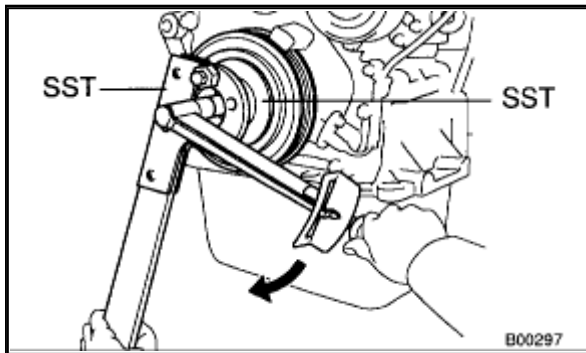


ZOOM SIZED FOR PRINT

13. INSTALL CRANKSHAFT PULLEY

- a. Clean the crankshaft pulley inside.
- b. Align the [pulley](#) set key with the key groove of the pulley, and slide on the pulley.
- c. Using SST and 2 nuts (width: 10 mm (0.25 inch), install the [pulley](#) bolt. SST 09213-70010, 09330-00021 Torque: 1ZZ-FE **138 Nm (1,409 kgf-cm, 102 ft. lbs.)** 2ZZ-GE **120 Nm (1,200 kgf-cm, 87 ft. lbs.)**


14. INSTALL CHAIN TENSIONER

- a. Check the chain tensioner.

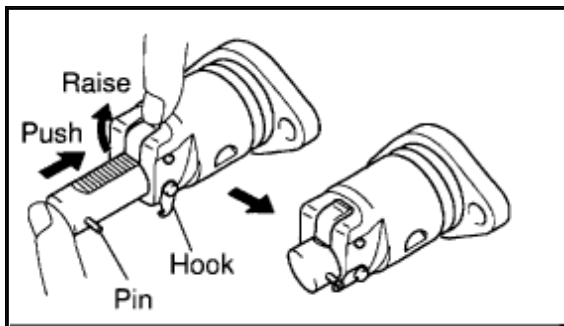

ZOOM SIZED FOR PRINT

- b. Release the ratchet pawl, fully push in the plunger and apply the hook to the pin so that the plunger cannot spring out.

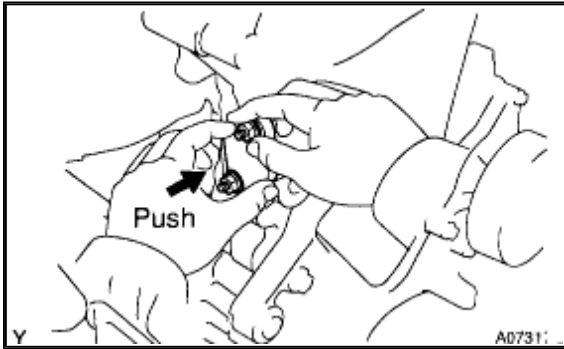


ZOOM

SIZED FOR PRINT

- c. Insert the O-ring with your hand until it reaches to the chamfering position and install nut temporarily. Then, by tightening the nut, insert the chain tensioner to the installation position. **HINT:**
- o In the case that the hook is released while pushing in, apply the hook again and push the tensioner in.
 - o Pay attention not to catch the O-ring as it is built in the chain tensioner previously.
- d. Tighten the 2 nuts. Torque: **9.0 Nm (92 kgf-cm, 80 inch lbs.)**


15. SET CHAIN TENSION

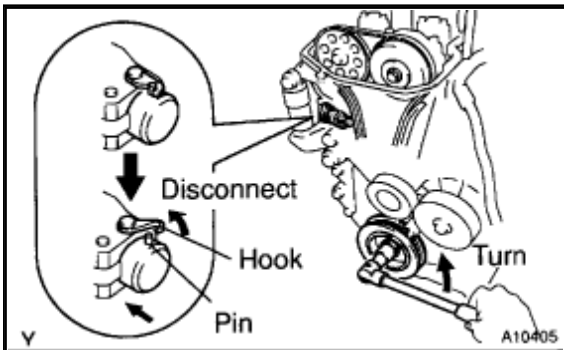

ZOOM

SIZED FOR PRINT


- a. Turn the [crankshaft](#) counterclockwise, and disconnect the plunger knock pin from the hook.

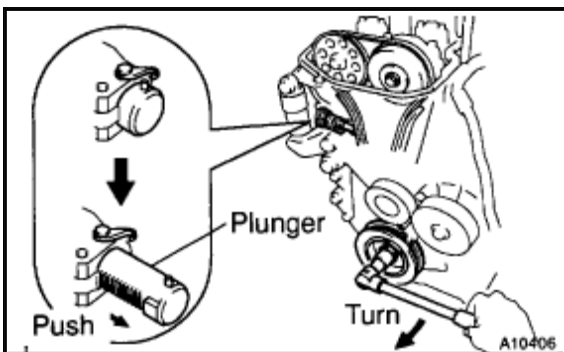

ZOOM

SIZED FOR PRINT


- b. Turn the [crankshaft](#) clockwise, and check that the slipper is pushed by the plunger.

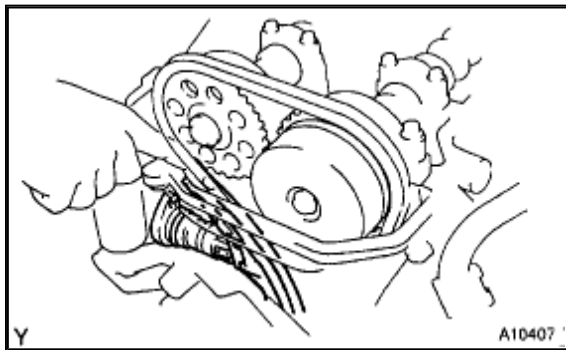

ZOOM

SIZED FOR PRINT

HINT: If the plunger does not spring out, press the slipper into the chain tensioner with a screwdriver or your finger so that the hook is released from the knock pin and the plunger springs out.

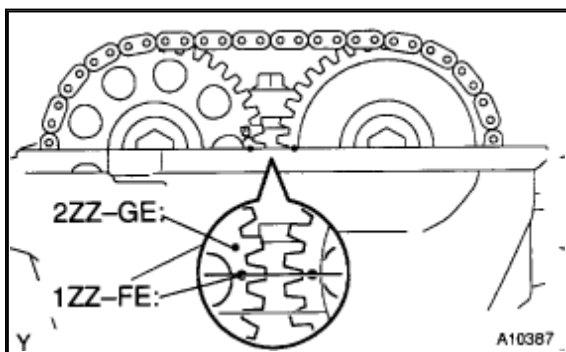

ZOOM

SIZED FOR PRINT


16. CHECK VALVE TIMING

- a. Turn the crankshaft pulley, and align its groove with timing mark "0" of the timing chain cover. **NOTICE:** Always turn the [crankshaft](#) clockwise.
- b. Check that the point marks of the [camshaft](#) timing sprockets are in straight line on the timing chain cover surface as shown in the illustration. If not, turn the [crankshaft](#) **1 revolution (360°)** and align the marks as above.

17. 1ZZ-FE: INSTALL CYLINDER HEAD COVER

- a. Remove any old packing (FIPG) material.




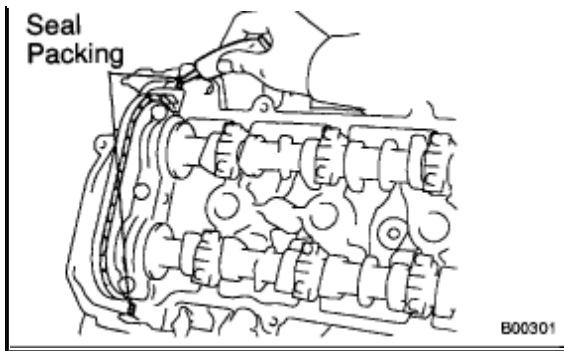

ZOOM

SIZED FOR PRINT

- b. Apply seal packing to 2 locations as shown in the illustration. Seal packing: Part No. 08826-00080 or equivalent
- c. Install the gasket to the cylinder head cover. **HINT:** Part must be assembled within 3 minutes of application. Otherwise the material must be removed and reapplied.

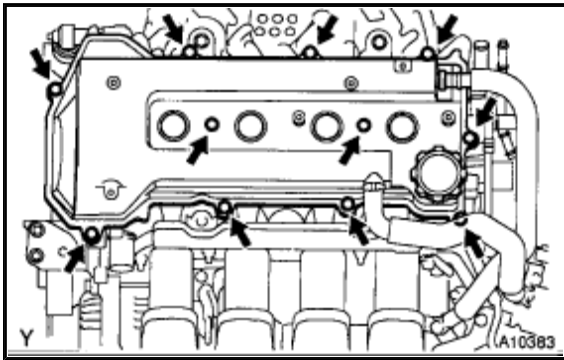


ZOOM

SIZED FOR PRINT

- d. Install the cylinder head cover with the 9 bolts, 2 seal washers and 2 nuts. Uniformly tighten the bolts and nuts, in several passes, in the sequence shown. Torque: w/o washer: **11 Nm (113 kgf-cm, 8 ft. lbs.)** w/ washer: **9.0 Nm (92 kgf-cm, 80 inch lbs.)**
- e. Connect the 2 PCV hoses to the cylinder head cover.
- f. Install the ignition coil.

18. 2ZZ-GE: INSTALL CYLINDER HEAD COVER


- a. Remove any old packing (FIPG) material. **HINT:** When FIPG on the head cover gasket side cannot be eliminated completely, replace the gasket.

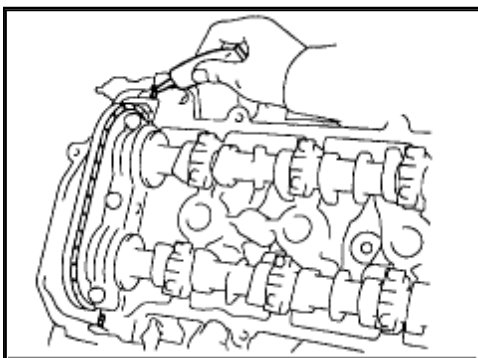

ZOOM

SIZED FOR PRINT

- b. Apply seal packing to 2 locations as shown in the illustration. Seal packing: Part No. 08826-00080 or equivalent
- c. Install the gasket to the cylinder head cover. **HINT:** Part must be assembled within 3 minutes of application. Otherwise the material must be removed and reapplied.

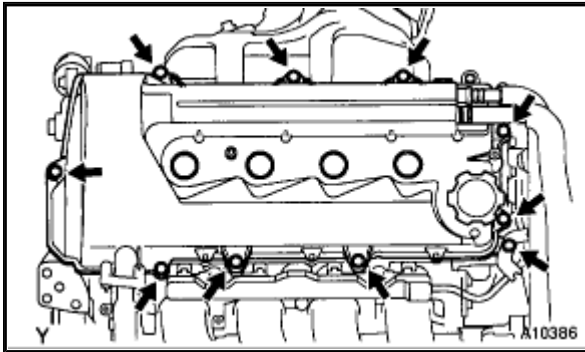


ZOOM SIZED FOR PRINT

- d. Install the cylinder head cover and wire harness protector with the bolts. Uniformly tighten the bolts, in the several passes, in the sequence shown. Torque: **10 Nm (100 kgf-cm, 7 ft. lbs.)**
- e. Connect the 2 PCV hoses to the cylinder head cover.



ZOOM SIZED FOR PRINT

- f. Install a new gasket and No.1 ventilation pipe with 2 nuts and bolt. Torque: Nut: **10 Nm (100 kgf-cm, 7 ft. lbs.)** Bolt: **25 Nm (255 kgf-cm, 18 ft. lbs.)**
- g. Connect the No. 3 ventilation hose to the No.1 ventilation pipe.
- h. Install the ignition coil.

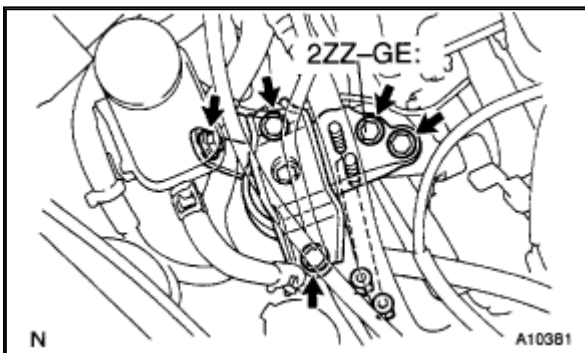

ZOOM SIZED FOR PRINT

19. INSTALL RIGHT-HAND ENGINE MOUNTING INSULATOR

- a. 1ZZ-FE: Install the Right-Hand engine mounting insulator with the 4 bolts and 2 nuts. Torque: **52 Nm (530 kgf-cm, 38 ft. lbs.)**
- b. 2ZZ-GE: Install the Right-Hand engine mounting insulator with the 5 bolts and 2 nuts. Torque: **52 Nm (530 kgf-cm, 38 ft. lbs.)**

20. INSTALL PS PUMP

- a. Install the PS pump with the 2 through bolts and nuts. Torque: **36 Nm (370 kgf-cm, 27 ft. lbs.)**
- b. Install the PS pump [pulley](#) with the pulley nut.
- c. Connect the PS oil pressure switch connector.

21. INSTALL GENERATOR AND [DRIVE BELT](#)

22. INSTALL RIGHT-HAND ENGINE UNDER COVER

23. INSTALL RIGHT-HAND FRONT WHEEL

24. FILL WITH ENGINE COOLANT

25. INSTALL FRONT FENDER APRON SEAL AND UPPER RADIATOR SUPPORT SEAL

26. START ENGINE AND CHECK FOR COOLANT LEAKS